

Instruction Manual Streaming Video Bethel-Tate HS

REV 1:

These instructions will direct the user in setting up the equipment for operation. For detailed information on user operations consult the manufacturer's documentation.

Set PC for use with the house sound system.

Items needed:

1. Focusrite Scarlet Solo
2. USB-C to USB-3 cable
3. ¼" (M) to XLR 3 (M) Adapter cable 2' long, gray
4. 2 - XLR (Mic) cable long enough to reach from the Adapter cable to the Sound Jack Panel Stage Right
5. XLR Male Turnaround
6. XLR Female Turnaround

Steps to connect PC:

- A. Connect the PC to playback through the sound system
 1. Connect the USB-C cable to the Focusrite Solo
 2. Connect the USB-3 End of the same cable to a USB-3 port on computer
 3. Plug ¼" (M) end of adapter cable into the L out on the Focusrite
 4. Connect the XLR-3 (M) end of adapter cable into input jack # 13 on the jack panel on the wall stage right. To control volume levels from this device use input 13 on the sound mixer.
- B. Connect the PC to bring house sound into the computer to send to Zoom
 1. Plug the XLR Male Turnaround into the Scarlet Solo mic jack.
 2. Plug a long XLR (Mic) cable into the other end of the XLR Male turnaround.
 3. Plug the other end of the long XLR (Mic) cable into Jack 14 on the Sound jack panel on stage right.
 4. Locate the mic cable in the Crows Nest marked channel 14.
 5. Plug the XLR Female Turnaround into the Channel 14 cable.
 6. Plug the other end of the XLR Female Turnaround in the back of the X32 mixer in the jack marked OUT 15. (Make sure that the cable marked MAIN is plugged into the jack marked OUT 16. If this cable is not plugged in there will be no sound in the main room speaker)

Steps to connect the ChromeBox:

Items needed:

1. Cable with Mini Tip Ring Sleeve (3.5-MTRS) on one end and a ¼" Tip Sleeve (1/4-TS) on the other end.
 2. Adapter ¼" to XLR Female
 3. XLR (Mic) cable long enough to reach the Sound jack panel on Stage Right.
-
1. Plug 3.5-MTRS connector into the headphone out on the Chromebox
 2. Plug the ¼-TS into the ¼" end of the adapter
 3. Plug the XLR end of the adapter into the Mic jack 12 on the Sound jack panel on Stage Right. The audio from the Chromebox will appear on the mixer on channel 12.

See drawing on page 2.



