

## Operation Guide Lower Level Video System

To operate the two displays in the lower level follow the following steps

1. Each display must be turned on separately using the supplied remote control
2. After powering the display on you may need to use the “Source” button to select what input you want to use. The inputs are as follows:

HDMI 1: This input is for whatever HDMI device is plugged into the HDMI jack on the wall of the stage area. ON the display this may be marked “PC”.

HDMI 2: This input is for the video from the Sanctuary. The Sanctuary sound and video system must be powered on for this to operate.

3. The display will assign its own name to the inputs depending on what it thinks is plugged into it. However the actual name for the input should still be shown in small letters.
4. To change the volume level locate the audio mixer in the equipment rack in the room beside the stage. (Be sure the audio system is powered on using the power button located near the ceiling next to the stage left display.) The levels are controlled as follows:

HDMI 1: use the volume control #5

HDMI 2: use the volume control #6

NOTE: Since the inputs being used are HDMI there may be a delay in the display showing the source material. This is normal as HDMI requires a two-way communication between the source device (iPhone, iPad, PC etc). If a connection is not made in a minute or so, unplug the source device from the HDMI connection and then plug it back in to reset the connection.

Greater New Hope Missionary Baptist Church Lower Level



1233 Castle Dr. Ste A5  
Mason, Oh. 45040

Phone: 513-703-0147

customerservice@soundconceptsllc.com  
Web site: www.soundconceptsllc.com